


# Installation Manual

1. This Package Contains:  
One CTMM-10 Modulator  
One Power Adapter  
One Installation Manual

Don't plug AC power until you read this manual.

If any of the contents listed above were not included with your CTMM-10 Modulator, please call us at (1-800-688-9282) for assistance.

2. Product diagram and description:

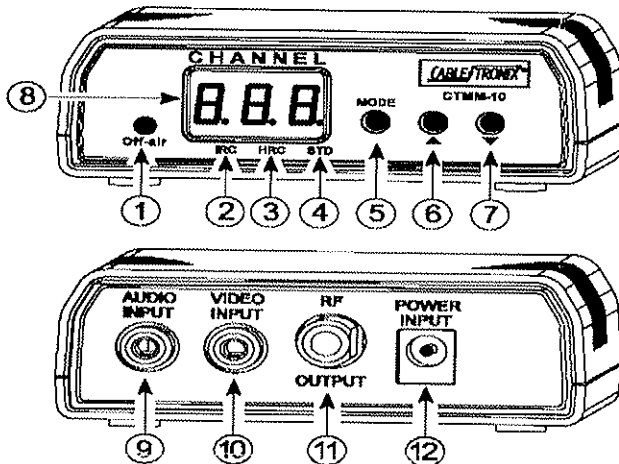

- ①、②、③、④ TV mode Indicator
- ⑤ MODE Switch › Off-air/CATV IRC/CATV HRC/CATV Standard sequentially
- ⑥ Channel up Switch
- ⑦ Channel down Switch
- ⑧ LED Channel Display
- ⑨ Audio Input
- ⑩ Video Input
- ⑪ RF Output (F-Type Connector)
- ⑫ Power Jack

3. Connect the RCA cable from the video source (e.g. satellite receiver, VCR, video camera) to the yellow RCA jack on the CTMM-10 modulator.
4. Connect the RCA cable from the audio source to the white RCA jack on the CTMM-10 modulator.
5. If you want to combine your signal with an off-air or CATV signal, please skip step 6, and proceed directly to step 7.
6. If you want to connect the CTMM-10 output directly to the TV set, use a coaxial cable to connect the CTMM-10 **RF OUTPUT** to the TV set input.
7. If you want to combine your signal with off-air or CATV signal, you will need a combiner. Use Cable-Tronix combiner/splitter part#CTGHS-2. Connect a coaxial cable from the CTMM-10 **RF OUTPUT** to one of the combiner inputs. Then connect the off-air or CATV signal to the other input of the combiner. Finally, connect the combiner output to the TV set input or distribution system.
8. Setting the Channel:  
Push the channel UP or DOWN switch to set the desired channel. You can select either Off-air channel or CATV (IRC/HRC/Standard) channel by pushing the **MODE TOGGLE SWITCH**. After about 15 seconds the channel will be automatically stored in the modulator's memory. In the event of a power outage the channel will be automatically recovered.