SD-CSP6.5-1

Please read these directions thoroughly before beginning installation of this speaker. For additional tech support contact us at the number below or visit our website.

IN-CEILING FRAMELESS SPEAKER

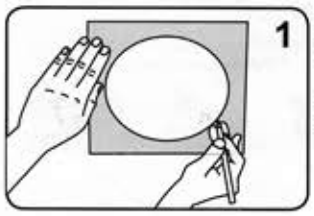

Use enclosed template to mark out the cutout, then simply cut along the line. This is the only cut you'll need to make

Model	Installation dimenision	Installation depth (mm)
6.5"	Φ210	>88

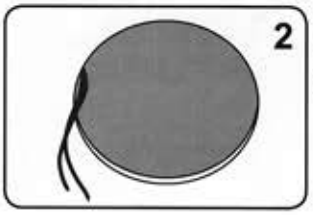

When laying loudspeaker cable from amplifier to installation point, be sure that the cable ends about 30 cm (12") beyond the wall cutout.

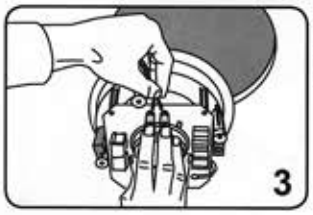

Please connect the speaker cable to the screw clamps. Ensure that the polarity is correct.

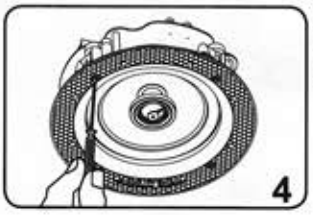

Tighten clamp screws until you can feel the frame, press firmly against the ceiling.

This indicates that the clamp is extended and is gripping the ceiling.

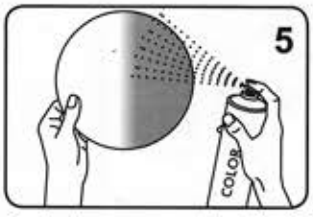

The grille cover of the InWall/InCeiling systems can simply be coated with regular paint. If the grille cover of your system comes with an additional coating this must be removed before painting.

Speaker Operation Manual

Equipment You Will Need

Besides template that is included, you must have a ladder and the equipment shown below to make the installation go smoothly.

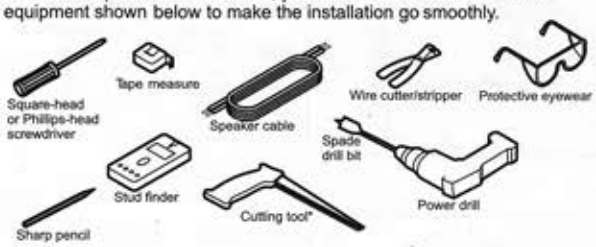

Troubleshooting

Problem	Possible caose	Solution
Bass too weak	Connection cable wrongly connected	Check connection cable and reconnect where necessary
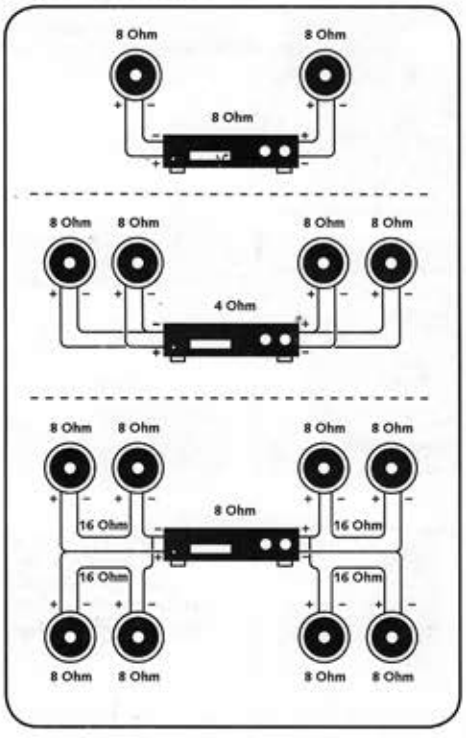
Wiring Possibilities